

**Digital Color  
Progressive Scan Camera**

 System: **Gigabit Ethernet**
**Baumer TXG08c-I7**

Revision 2

**Art. No: OD108729**

- Gigabit Ethernet progressive scan CCD camera
- 1028 x 772 pixel
- Up to 28 full frames per second
- GigE Vision® standard compliant
- On board integrated color processor for high quality color calculation
- Outstanding image quality
- High sensitivity and dynamic range
- High quality slow scan mode for lowest readout noise
- True partial scan function (ROI) for increased frame rates
- External synchronization via industrial compliant process interface (trigger / flash)
- Integrated supplementary function for flexible integration
- Jumbo frames supported
- Integrated 32 MByte RAM for temporarily image data buffering
- Camera parameter programmable in real-time
- Ultra compact and lightweight aluminum housing
- IP67 camera housing design based on EHEDG recommendation
- Standard M12 industrial connector
- Baumer-GAPI: Flexible, generic software interface for Windows / Linux



shown lens and tubes need to be ordered separately

**1. Overview**

Model Name	TXG08c
Sensor	1/3" interline progressive scan CCD
Shutter / readout mode	global shutter / progressive scan readout
Number of pixel	1028 x 772
Scan area	4.78 mm x 3.59 mm
Pixel size	4.65 µm x 4.65 µm
Color filter	RGB Bayer mosaic
<b>Operation modes</b>	
Trigger mode	yes, overlapped operation
Free running mode	yes, overlapped operation
<b>Signal processing</b>	real-time software programmable
Pixel clock	29.75 MHz fast scan / 14.87 MHz high quality (HQ) scan
A/D converter	12 bit
Exposure control (t <sub>exp</sub> )	total: 4 µsec .. 60 sec step: 1 µsec
Gain control	0 .. 20 dB
Offset (black level)	0 .. 255 LSB (12 bit)
Image data buffer	max. 7 images

Technical specifications subject to change

Image acquisition								
Camera image format modes	Format (pixel)	GenCam standard	Format ID	Pixel format	Pixel clock MHz	Frames per sec. *)	t <sub>readout</sub>	
Full frame HQ	slow	1028 x 772	Vendor specific	00	BayerRG8	14.87	14	71 msec
					BayerRG12			
					Mono8			
					YUV411 Packed			
					YUV422 Packed **)			
					YUV444 Packed			
					RGB8 Packed			
Full frame	fast	1028 x 772	yes	01	BayerRG8	29.75	28	36 msec
					BayerRG12			
					Mono8			
					YUV411 Packed			
					YUV422 Packed **)			
					YUV444 Packed			
					RGB8 Packed			
BGR8 Packed								
<b>Standard features</b>								
<b>Image size controls</b>								
Pixel format	BayerRG8, BayerRG12, Mono8, YUV411 Packed, YUV422 Packed, YUV444 Packed, RGB8 Packed, BGR8 Packed							
Test image selector	yes, in all modes Off, GreyHorizontalRamp, GreyVerticalRamp, HorizontalLineMoving, VerticalLineMoving, HorizontalAndVerticalLineMoving							
Partial scan	yes, format freely programmable in all modes							
<b>Analog controls</b>								
Gain	yes							
Black Level (Off set)	yes							
Gamma	no							
<b>Acquisition and Trigger</b>								
Acquisition mode	Continuous							
Trigger source	HardwareTrigger (Line0), SoftwareTrigger, CommandTrigger (ActionCommand), All or Off							
Trigger delay	0 .. 2 sec, 512 trigger can be tracked, step: 1 µsec							
Sequencer	no							
<b>Digital I/O</b>								
Lines	Line0 (Input), Line1 (Output)							
Line source (outputs only)	Line1: Off, ExposureActive or UserOutput							
Line debouncer	yes, low and high signal separately selectable 0 .. 5 msec step: 1µsec							
<b>Event Generation</b>								
Events	GigEVisionError, EventLost, Line0RisingEdge, Line0FallingEdge, Line1RisingEdge, Line1FallingEdge, ExposureStart, ExposureEnd, FrameStart, FrameEnd, TriggerReady, TriggerOverlapped, TriggerSkipped							
Event Notification	yes, ON / OFF							
<b>Counters and Timers</b>								
Framecounter	yes, 2 <sup>32</sup> can be set by user							
<b>LUT Controls</b>								
LUT selector	no							
Defect pixel correction (custom)	yes, ON / OFF							
Defect pixel list (custom)	yes, max. 256 pixel coordinates (x, y) can be stored							
<b>GigEVisionTransportLayer</b>								
PayLoadsize	4 Byte .. 2.390.384 Byte							
<b>UserSets</b>								
User set selector	Default (factory settings / read only) UserSet1, UserSet2, UserSet3 (read and write)							
UserSetDefaultSelector	yes, define the start up "UserSet"							

<b>Advanced features</b>		
Time stamp function	yes, 64 bit tick = 32 nsec	
Asynchronous message channel	yes	
Concatenation function	yes	
User defined identifier	yes, user programmable permanent identifier	
ActionCommand	yes, ID 0 = Trigger	
<b>Data quality</b>	at 20 °C, gain = 1, exposure time = 32 msec, full frame mode, slow scan	
Readout noise	$\sigma < 0.5$ LSB (8 bit) typical	
Dynamic range	typical > 54 dB	
<b>Optical interface</b>	C-Mount on request: CS-Mount	
Optical filter	Hoya E-CM500S on request: dust protection, daylight filter or no filter	
<b>Process interface functions</b>		
Async. Trigger	yes, trigger mode operation, "Off", "software trigger", "hardware trigger", "command trigger" or "all" separately selectable (overtriggered signals and trigger signals during the readout time will be notified in the received image header)	
Exposure Active (External flash sync)	yes, delay_value ( $t_{\text{delay flash}}$ ) $\leq 4$ $\mu\text{sec}$ , duration_value ( $t_{\text{duration}}$ ): slow mode = $t_{\text{exp}} + 100$ $\mu\text{sec}$ fast mode = $t_{\text{exp}} + 50$ $\mu\text{sec}$	
User Output	yes, ON / OFF	
Software reset	yes, delay up to 102 msec	
Asynchronous reset	Full frame	slow fast
		delay up to 13.9 msec 7.2 msec
Image info header	yes	
<b>Electrical interface</b>		
Data / control	standard single cable 1000 Base-T with M12 connector, Cat6 recommended / minimum Cat5e	
Power	VCC: 8 VDC .. 30 VDC I: 450 mA .. 135 mA	
Power consumption	approx. 4 Watt	
Digital input	Line 0: trigger signal, opto decoupled $U_{\text{IN(low)}} = 0 \dots 4.5$ VDC, $U_{\text{IN(high)}} = 11 \dots 30$ VDC $I_{\text{IN}} = \text{max. } 10$ mA rising edge (invert = false) *** min. impulse length ( $t_{\text{min}}$ ): 2 $\mu\text{sec}$ trigger delay out of $t_{\text{readout}}$ ( $t_{\text{delay trigger}}$ ): 4 $\mu\text{sec}$ max. trigger delay during $t_{\text{readout}}$ ( $t_{\text{delay trigger}}$ ): slow mode = 100 $\mu\text{sec}$ fast mode = 50 $\mu\text{sec}$	
Digital output	Line 1: opto decoupled $U_{\text{EXT}} = 5 \dots 30$ VDC / 24 VDC typical, $I_{\text{OUT}} = \text{max. } 16$ mA high active (invert = false) ***	
LED	1: green: Power on yellow: Readout active 2: green: Link Phy (1 GBit) green flash: Ethernet RX yellow: Ethernet TX yellow/red flash: Ethernet RX/TX	
<b>Environmental</b>		
Storage temperature	-10 °C .. +70 °C	
Operating temperature	+5 °C .. +50 °C ****) between +39 °C .. +50 °C, note the max. housing temperature	
Housing operating temperature	max. +50 °C	
Humidity	10 % .. 90 % non condensing	
Conformity	CE, FCC Part 15 class B, RoHS compliant	

<b>Housing</b>	aluminum, IP67			
Dimensions	Ø 65 mm x 50 mm			
Weight camera	< 360 g			
Weight tube	52 mm	62 mm	71 mm	94 mm
	< 120 g	< 140 g	< 150 g	< 200 g
<b>1000 Base-T interface</b>	1000 Mbit / sec			
Ethernet IP configuration	persistent IP / DHCP / LLA			
Stream channel packet size	576 Byte (default) .. 65535 Byte jumbo frames supported			
Interpacketgap	0 .. 2 <sup>32</sup> -1 ticks			
Resend function	yes			
<b>Software</b>	Baumer-GAPI SDK with supported OS socket driver and Baumer filter driver / SDK for Windows XP (32 bit) / Windows Vista (32 bit / 64bit) Linux Kernel 2.6.xx (64 bit / 32 bit)			
	GigE Vision® compatible programs and image processing libraries supported Windows / Linux depending on the actually driver software is used			


- \*) maximum frame rate in free running mode, effective frame rate depending on camera image format mode settings and set exposure time ( $t_{exp} < t_{readout}$ )
- \*\*) default pixel format
- \*\*\*) can be inverted via software
- \*\*\*\*) housing temperature is limited by CCD sensor specification

## 2. Camera Factory Settings after Camera Start-up


	Camera factory settings after camera start-up
<b>Operation modes</b>	free running mode
<b>Signal processing</b>	
Exposure control	32 msec
Gain control	factor 1 = 0 dB
Offset (black level)	0
<b>Image acquisition</b>	
Camera image format mode	mode id = 01, full frame YUV422 Packed
Partial scan function	not active
Test image selector	Off
Defect pixel correction	On
<b>Electrical interface</b>	
Exposure Active (External flash sync)	disabled, digital output set to low status (high impedance) invert = false line source = Exposure Active
Async. Trigger	disabled invert = false trigger source = Line0

### 3. Timing Operation Modes

Trigger Mode: start up time

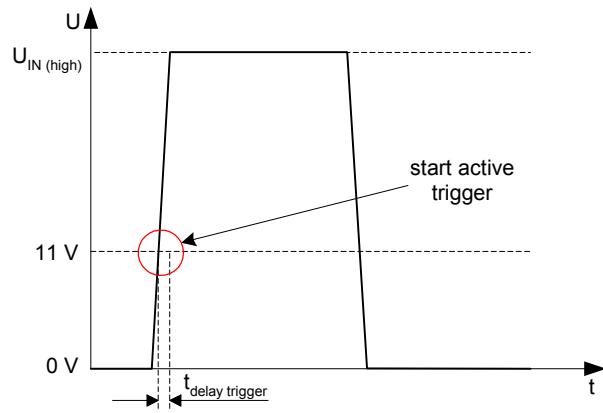

Trigger Mode: trigger mode 0, overlapped trigger

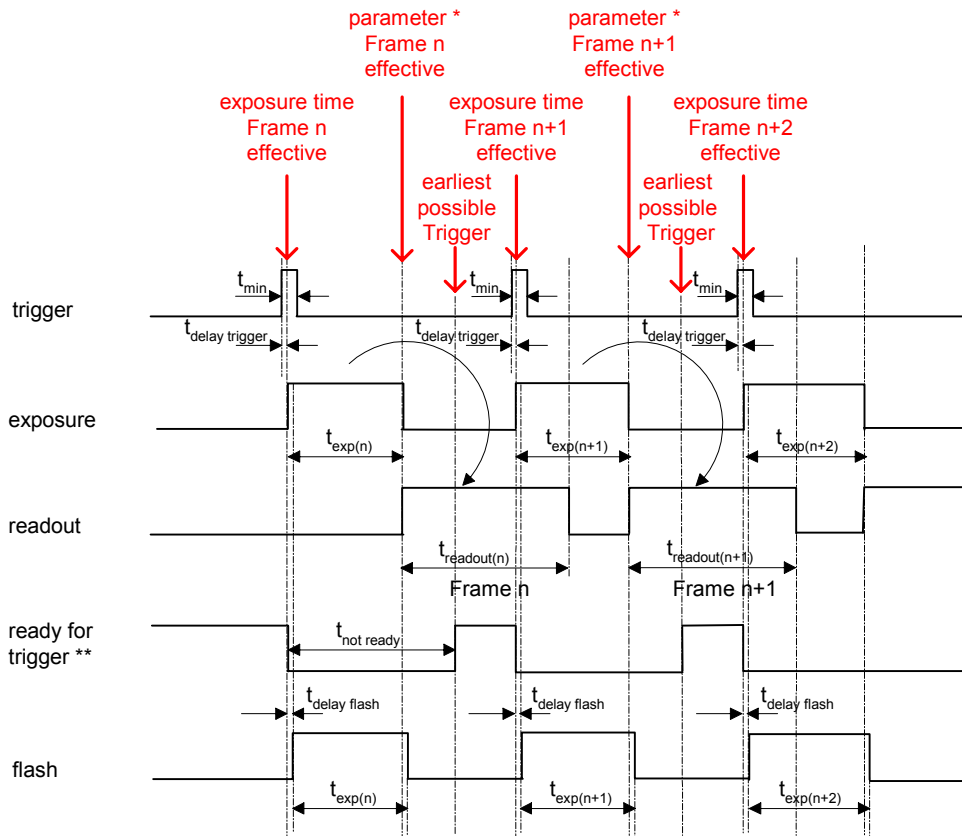

$$t_{exp} < t_{readout}: t_{earliest\ possible\ trigger\ (n+1)} = t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{earliest\ possible\ trigger\ (n+1)} = t_{exp(n)}$$


$$t_{exp} < t_{readout}: t_{not\ ready\ (n+1)} = t_{exp(n)} + t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{not\ ready\ (n+1)} = t_{exp(n)}$$

\* image parameter: offset  
global gain  
mode  
partial scan

\*\* signal will be notified as event "TriggerReady" and is not available as digital output

Trigger Mode: trigger mode 0, overlapped trigger , when  $t_{exp(n+2)} > t_{exp(n+1)}$

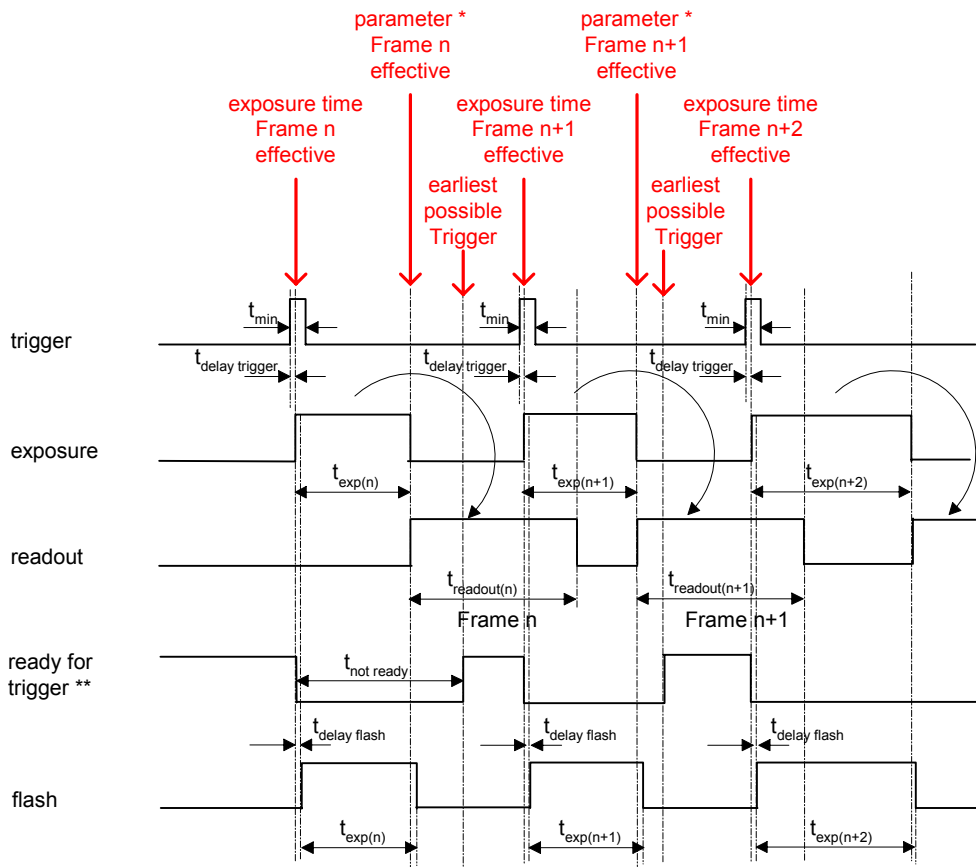

$$t_{exp} < t_{readout}: t_{earliest\ possible\ trigger\ (n+1)} = t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{earliest\ possible\ trigger\ (n+1)} = t_{exp(n)}$$


$$t_{exp} < t_{readout}: t_{not\ ready\ (n+1)} = t_{exp(n)} + t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{not\ ready\ (n+1)} = t_{exp(n)}$$

\* image parameter: offset  
global gain  
mode  
partial scan

\*\* signal will be notified as event "TriggerReady" and is not available as digital output

Trigger Mode: trigger mode 0, overlapped trigger , when  $t_{exp(n+2)} < t_{exp(n+1)}$

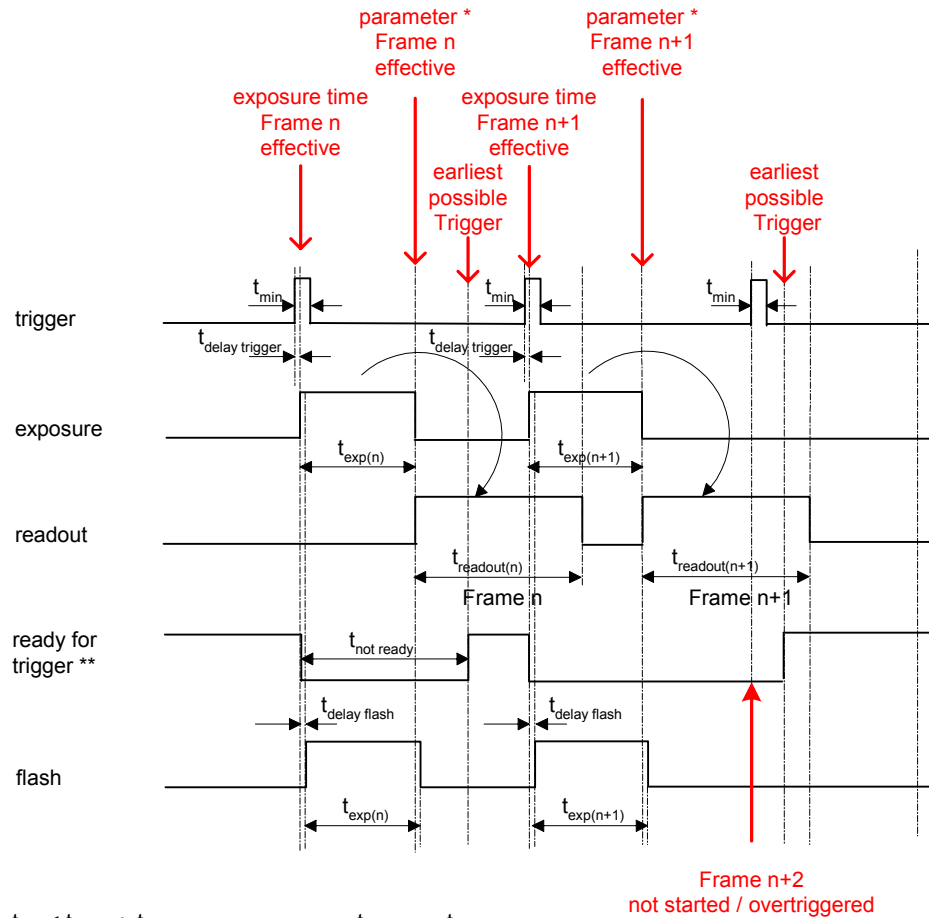

$$t_{exp} < t_{readout} : t_{earliest\ possible\ trigger\ (n+1)} = t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout} : t_{earliest\ possible\ trigger\ (n+1)} = t_{exp(n)}$$

$$t_{exp} < t_{readout} : t_{not\ ready\ (n+1)} = t_{exp(n)} + t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout} : t_{not\ ready\ (n+1)} = t_{exp(n)}$$


Frame n+2  
not started / overtriggered

\* image parameter: offset  
global gain  
mode  
partial scan

\*\* signal will be notified as event "TriggerReady" and is not available as digital output




Free Running Mode: overlapped operation

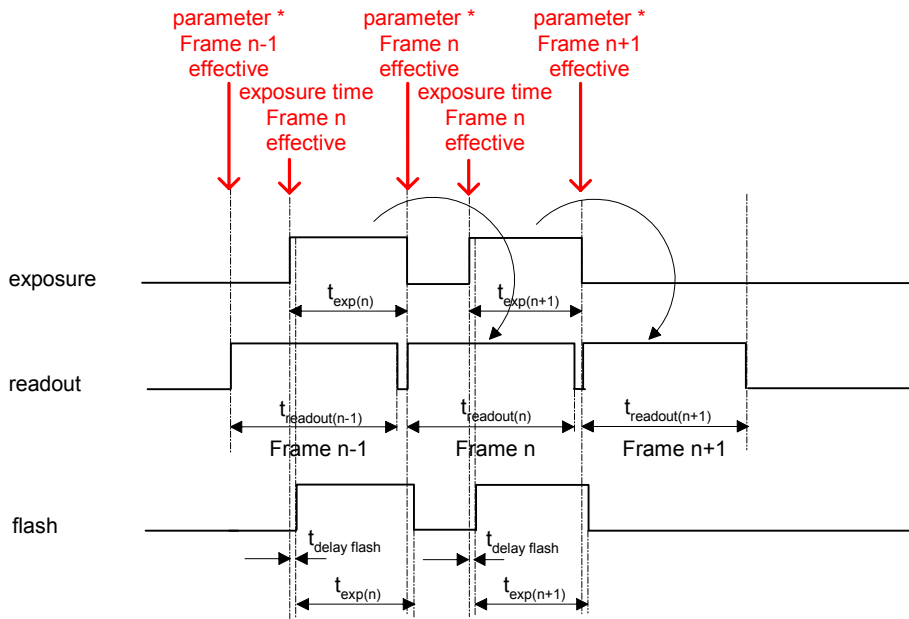

\* image parameter: offset  
 global gain  
 mode  
 partial scan


## 4. Housing

### 4.1 Camera

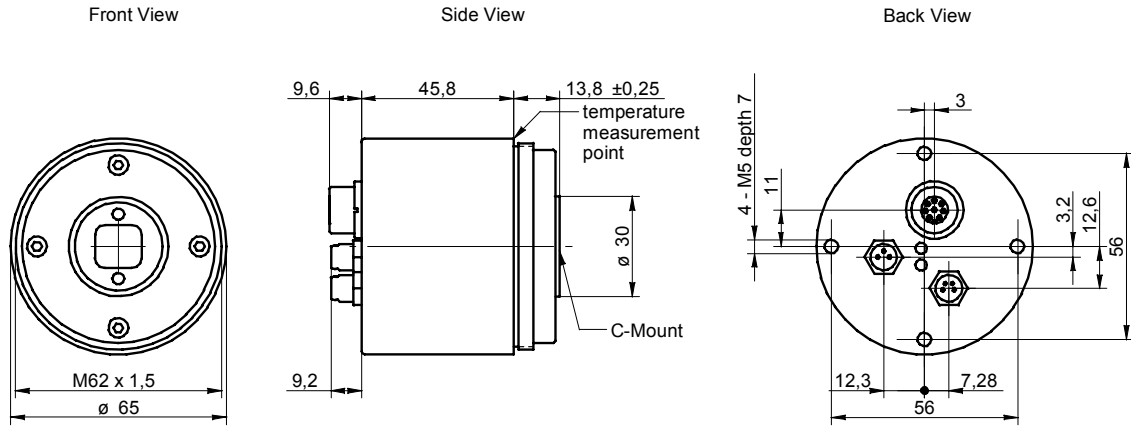


4.2 Tube

Front View

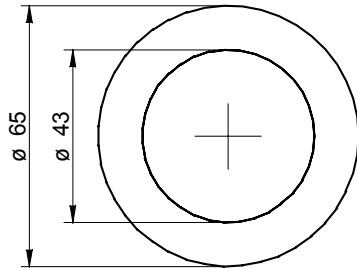


Side View

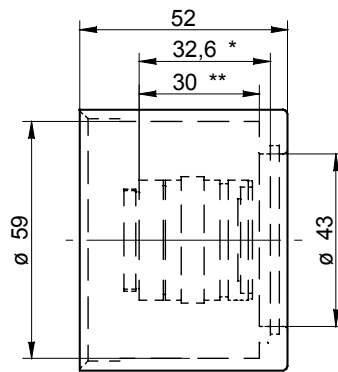


Item Number


OD108571

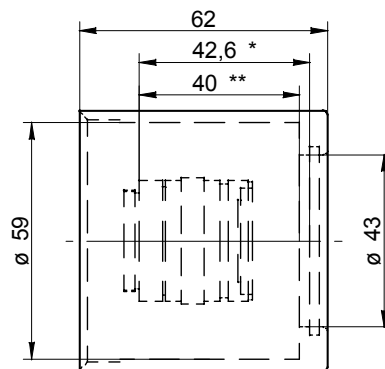

OD108568

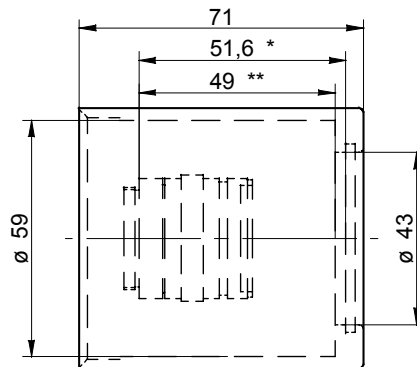

OD108569

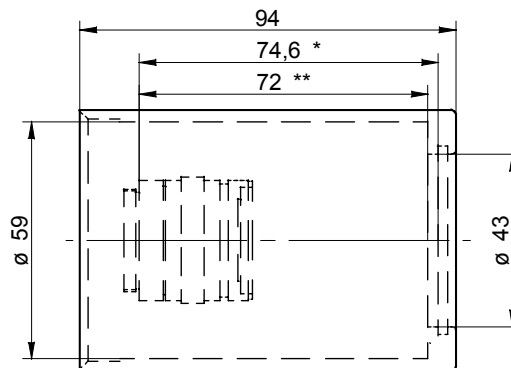

OD108570

\* max. installation space between C-mount and glass

\*\* max. installation space between C-mount and cylinder bottom

5. Connectors / Electrical Interfaces

5.1 Pin assignment:


Data / Control 1000 Base-T	Type: female M12 / 8 pin A cod.
	1: MX3- 2: MX4+ 3: MX4- 4: MX1- 5: MX2+ 6: MX1+ 7: MX3+ 8: MX2-

Power	Type: Lumberg RSMEESD / 3 pin
	1: Power VCC+ 3: GND 4: not used
	Power cable wires color: 1 = brown 3 = blue 4 = black


Trigger Flash	Type: Lumberg RSMEESD 4pin.
	*) resistor must be used, $I_{OUT} = 16 \text{ mA}$ by $U_{EXT} = 24 \text{ VDC}$ recommended, drawing shown above example for using high active signal
	Trigger / Flash cable wires color *): 1 = brown 2 = white 3 = blue 4 = black

\*) shielded trigger / flash cable should be used and ordered separately

5.2 Flash sync sample  $U_{EXT} = 24\text{ VDC}$  high active:

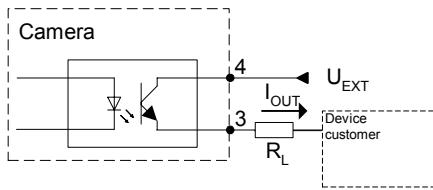


Timing example:  
 measurement condition  $U_{EXT} = 24\text{ VDC}$  /  $I_{OUT} = 16\text{ mA}$   
 $R_L = 1.5\text{ kOhm}$

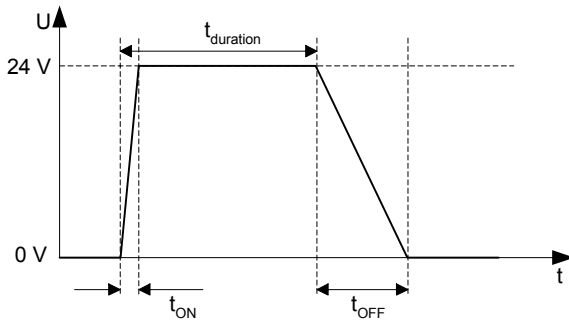


$t_{ON}$  time = typ.  $2\ \mu\text{sec}$   
 $t_{OFF}$  time = typ.  $40\ \mu\text{sec}$

5.3 Flash sync sample  $U_{EXT} = 24\text{ VDC}$  low active:

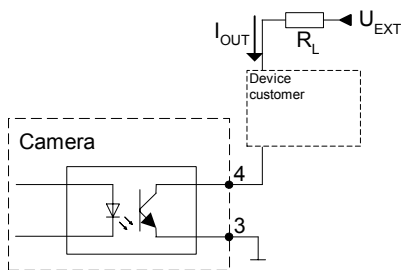

Timing example:  
 measurement condition  $U_{EXT} = 24\text{ VDC}$  /  $I_{OUT} = 16\text{ mA}$   
 $R_L = 1.5\text{ kOhm}$

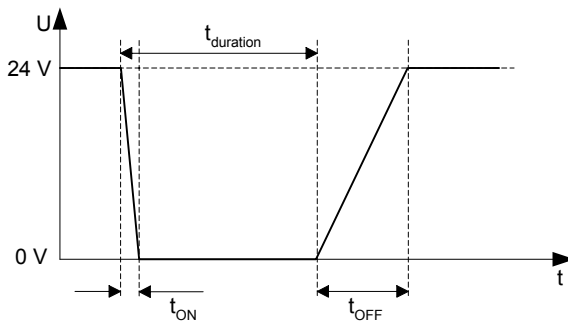

$t_{ON}$  time = typ.  $2\ \mu\text{sec}$   
 $t_{OFF}$  time = typ.  $40\ \mu\text{sec}$

End of Document